



motorola


QUICK START GUIDE

For a full explanation of all features and instructions, please refer to the User's Guide.

1. Setting up your digital video monitor


MODEL:
FOCUS360

A. Fixing the Outdoor Camera Unit Mounting Plate on the wall

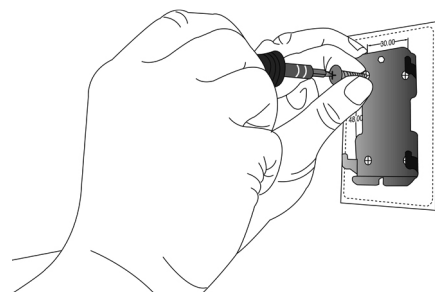


Fasten the mounting plate on the wall with the 4 Philips head screws (provided).

B. Hanging Outdoor Camera Unit on the Mounting Plate

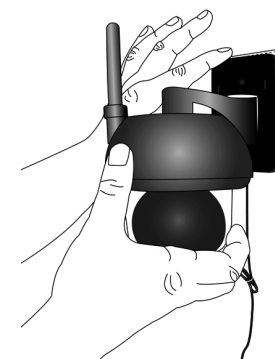

Place the 4 mounting slots of the camera base on to the 4 catches on the mounting plate. Make sure the unit sits firmly on the mounting plate with the center holes of the 2 parts lined up.

C. Secure the Outdoor Camera Unit

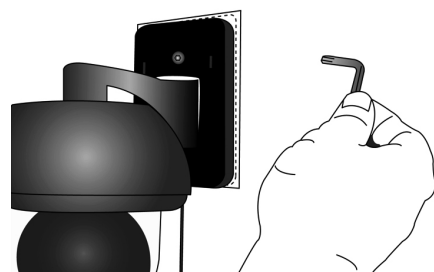


Fasten the unit to the mounting plate at the center hole with the tamper-proof screw with the wrench key provided.

D. Connecting Power Supply for the Outdoor Camera Unit




Plug the Outdoor Camera Unit's power adapter into the extension cord socket and then plug the power adapter into the electrical outlet.

E. Connecting power supply for the Indoor Camera Unit

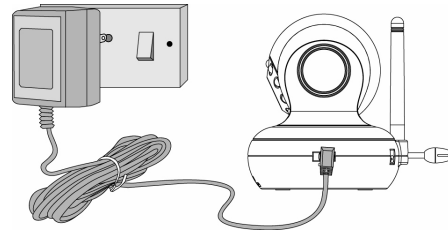


Connect the small plug of the power adapter to the camera unit and the other end to the electrical outlet. Only use the enclosed adapter (5.9V DC/1000mA).

F. Installing the battery pack for the Monitor Unit

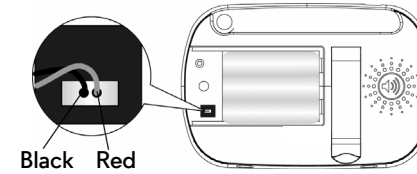


Insert the wire tab of the rechargeable battery pack into the contact slot as shown and fit the battery pack into the compartment.

G. Fastening the cover for the Monitor Unit

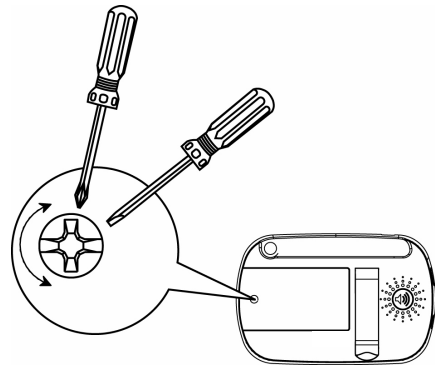

Small cross head or Flat end screwdriver

H. Connecting power supply for the Monitor Unit

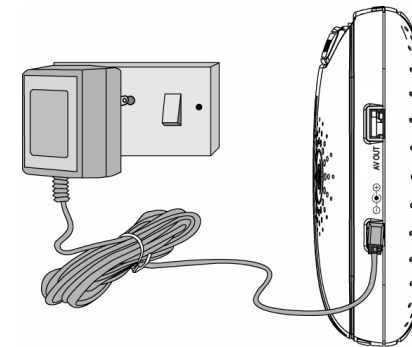









Connect the small plug of the power adapter to the monitor unit and the other end to the electrical outlet. Only use the enclosed adapter (6V DC/500mA).

WARNING:

STRANGULATION HAZARD – In case this unit is being used to monitor infants or children, keep the unit and adapter cord more than 3 feet from the crib and out of their reach. Never place camera or cords within a crib or near a bed. Secure the cord away from children's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

As with any electrical device, supervision of your pet's usage should be exercised until your pet is acclimated to the product. If your pet is prone to chewing, we strongly recommend you keep this and all other electrical devices out of its reach.

2. Basic operation of the keys

Monitor unit		
 	POWER ON-OFF / VIDEO button	Press and hold to switch the unit on/off. Press to turn the LCD display on/off.
	UP/DOWN buttons	Press to tilt the camera upward or downward. Press to adjust menu settings.
	LEFT/RIGHT buttons	Press to pan the camera left or right. Press to access different menu options.
	MENU button	Press to open menu options or exit.
	OK button	Press to confirm a selection.
	QUICK SCAN button	Press to double the pan/tilt speed of the Outdoor Camera Unit.
	TALK button	Press and hold to talk to your Indoor Camera Unit.
Indoor Camera Unit		
ON/OFF switch		Push the power switch to the right to switch the unit on. Push the power switch to the left to switch the unit off.

3. General Information

If your product is not working properly...

1. Read this Quick Start Guide or the User's Guide.
2. Contact Customer Service:
US and Canada 1-888-331-3383
Email: motorola@encompass.com



Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M Logo, are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. All other trademarks are the property of their respective owners. © 2013 Motorola Mobility LLC. All rights reserved.

Printed in China
Version 6.0