motorola

USER'S GUIDE

Wi-Fi® Outdoor Pet Video Camera

Model: SCOUT73, SCOUT73-2

The features described in this user's guide are subject to modifications without prior notice.

Welcome...

to your new Motorola Wi-Fi® Outdoor Home Video Camera!

Thank you for purchasing your new Motorola Wi-Fi® Outdoor Home Video Camera.

If you have always wondered what happens when you are away, wonder no more. Now you can monitor your children, pets or property with this easy to use system. You can install the Camera only from your iPhone®/iPad® or Android™ devices and view the Camera video from your PC or Notebook, as well as from your iPhone®/iPad® or Android™ devices.

Please keep your original dated sales receipt for your records. For warranty service of your Motorola product, you will need to provide a copy of your dated sales receipt to confirm warranty status. Registration is not required for warranty coverage.

For product related questions, please call:

US and Canada 1-888-331-3383
Email: support@motorolahome.com

This User's Guide has all the information you need to make the most out of your product.

Please read the Safety Instructions on pages 5 - 8 before you install the unit.

Inside the Box

- 1 x Wi-Fi® Camera Unit
- 1 x Power Adapter
- 1 x Quick Start Guide
- 1 x User Guide
- 4 x Mounting Screws and Dry Wall Plugs
- 1 x Tamper-proof Screw
- 1 x Metal Bracket
- 1 x Wrench Key
- 1 x Y-Shaped Power/LAN Cable Connector

Overview of your Camera

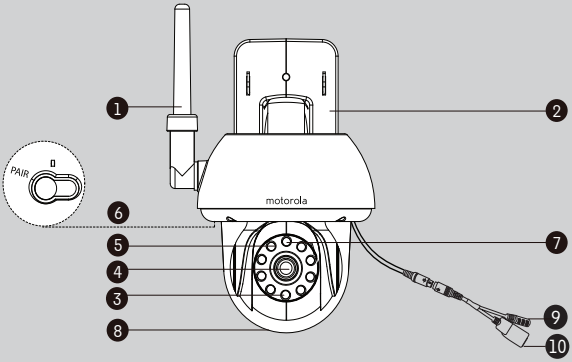

1. Antenna
2. Wall mount base
3. Infrared LEDs (for night vision)
4. Camera Lens
5. Light Sensor (for night mode detection)
6. PAIR Button
7. Power / Status Indicator
8. Dome Shape Cover
9. Power connection socket
10. LAN interface*
    (Adaptive Ethernet Interface for connecting with various network devices, such as hub, router, etc.)

***An Ethernet connection is required when the Wi-Fi® connection is not optimal. Connect the Ethernet cable (not supplied) to the LAN interface, and then connect the other end to a spare port on your router.**

Important guidelines for installing your Wi-Fi® Camera Unit

- Use of other 2.4 GHz products, such as other wireless networks, Bluetooth™ systems or microwave ovens may cause interference with this product. Keep the Wi-Fi® Camera Unit away from these types of products, or turn them off if they appear to be causing interference.
- Always ensure that you have a good Wi-Fi® connection available.

motorola

Table of contents

1. Safety Instructions 5
2. System Requirements 9
3. Getting started - Connecting Devices 10
   - 3.1 Setup 10
   - 3.2 User Account and Camera Setup on Android™ Devices 11
     - 3.2.1 Power ON and Connect the Camera 11
     - 3.2.2 Download the Hubble App 11
     - 3.2.3 Run Hubble for Motorola Monitors App on Android™ Devices 11
     - 3.2.4 Add the Camera to your account 12
   - 3.3 User Account and Camera Setup on iPhone®/iPad® 15
     - 3.3.1 Power ON and Connect the Camera 15
     - 3.3.2 Download the Hubble App 15
     - 3.3.3 Run Hubble for Motorola Monitors App on iPhone®/iPad® 15
     - 3.3.4 Add the Camera to your account 16
4. Camera 21
   - 4.1 Install your Camera and setting up 21
   - 4.2 Overview of the Features on Hubble App 23
5. Working with PC/Notebook 25
6. Procedure for resetting the Camera 26
7. Help 27
8. General Information 33
9. Technical Specifications 39

1. Safety Instructions

WARNING:

STRANGULATION HAZARD - In case this unit is being used to monitor infants or children, keep the unit and adapter cord more than 3 feet from the crib and out of their reach. Never place camera or cords within a crib or near a bed. Secure the cord away from children's reach. Never use extension cords with AC Adapters. Only use the AC Adapters provided.

As with any electrical device, supervision of your pet's usage should be exercised until your pet is acclimated to the product. If your pet is prone to chewing, we strongly recommend you keep this and all other electrical devices out of its reach.

Wi-Fi® CAMERA UNIT SET UP & USE:

- Determine a location for the Wi-Fi® Camera Unit that will provide the best view of the area you would like to monitor (ie back yard or front door).
- Fix the camera to a flat wall using the wall mounting plate and following the instructions provided.
- NEVER place the Wi-Fi® Camera Unit or cords within the crib.

WARNING

This Wi-Fi® Camera Unit is compliant with all relevant electromagnetic field standards and is, when handled as described in the User's Guide, safe to use. Therefore, always read the instructions in this User's Guide carefully before using the device.

- Adult assembly is required due to small parts. Keep all small parts away from children.
- This product is not a toy. Do not allow children to play with it.
- This Wi-Fi® Camera Unit is not a substitute for responsible adult supervision.
- Keep this user's guide for future reference.
- Do not place the Wi-Fi® Camera Unit or cords in the crib or within reach of the baby (the unit should be at least 3 feet away).
- Keep the cords out of reach of children.
- Do not cover the Wi-Fi® Camera Unit with a towel or blanket.
- Test the Wi-Fi® Camera Unit and all its functions so that you are familiar with it prior to use.
- Do not use the Wi-Fi® Camera Unit near water.
- Do not install the Wi-Fi® Camera Unit near a heat source.
- Only use the power adapter provided. Do not use other power adapters as this may damage the device.
- Never use extension cords with power adapters.
- Do not touch the plug contacts with sharp or metal objects.

Important instructions:

- **Read and Follow Instructions** - Please read all the safety and operating instructions before operating the product.
- **Retain Instructions** - The safety and operating instructions should be retained for future reference.
- **Heed Warnings** - Comply with all warnings on the product and in the operating instructions.
- **Polarization** - Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than

the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the supplied plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

- **Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supplied to your location, consult your camera dealer or local power company. For products intended to operate from battery power, or other sources, please refer to the operating instructions.
- **Overloading** - Do not overload wall outlets or extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.
- **Power-Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them. Pay particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- **Surge Protectors** - It is highly recommended that the camera equipment be connected to a surge protector. Doing so will protect the equipment from damage caused by power surges. Surge protectors should bear the UL listing mark or CSA certification mark.
- **Uninterruptible Power Supplies (UPS)** - Because this product is designed for continuous, 24/7 operation, it is recommended that you connect the product to an uninterruptible power supply. An uninterruptible power supply has an internal battery that will keep the product running in the event of a power outage. Uninterruptible power supplies should bear the UL listing mark or CSA certification mark. CAUTION: Maintain electrical safety. Power line operated equipment or accessories connected to this product should bear the UL listing mark or CSA certification mark on the accessory itself and should not be modified so as to defeat the safety features. This will help avoid

any potential hazard from electrical shock or fire. If in doubt, contact qualified service personnel.

- **Ventilation** - Slots and openings on the case are provided for ventilation to ensure reliable operation of the product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the camera equipment on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided and the product manufacturer's instructions have been followed.
- **Attachments** - Do not use attachments unless recommended by the product manufacturer, as they may cause a hazard.
- **Heat** - The product should be located away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.
- **Accessories** - Do not place this camera equipment on an unstable cart, stand, tripod, or table. The camera equipment may fall, causing serious damage to the product. Use this product only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the product. Any mounting of the product should be according to the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.
- **Camera Extension Cables** - Check the rating of your extension cable to verify its compliance prior to installation.
- **Mounting** - The cameras provided with this system should be mounted only as instructed in this guide or the instructions that came with your cameras, using the supplied mounting brackets.
- **Camera Installation** - Cameras are not intended for submersion in water. When installing cameras outdoors, installation in a sheltered area is recommended.

2. System Requirements

Web Portal

- Windows® 7
- Mac OS® 10.7
- Chrome™ 24
- Internet Explorer® 9
- Safari® 6
- Java™ 7
- Firefox® 18.0
- Adobe® Flash® Player 15.0

Android™ System

- Version 4.2 or above

iPhone®/iPad® iOS

- Version 7.0 or above

Wi-Fi® requirements:

- At least 0.6 Mbps upload bandwidth per camera. Test your Internet speed at: http://www.speedtest.net/

3. Getting started - Connecting Devices

How does it work?

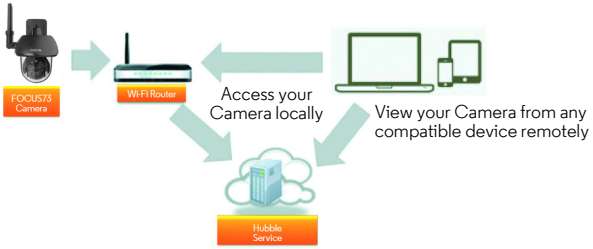

When a user tries to access the Camera, our secure server authenticates the user's identity and permits access to the Camera.

3.1 Setup

- Connect the Camera's round plug to the Y-shaped Power/LAN cable connector. (see section 4.1 D: Connecting the Camera Unit's Power Supply)
- Insert the power adapter plug into the power connection socket of the Y-shaped Power/LAN cable connector and connect the other end of the power adapter to a suitable electrical outlet. The LED indicator will light up.
- The Camera must be within range of the Wi-Fi® router with which you want to connect. Make sure the password of the router is available for entering during the in-app setup process.

Status of LED Indication:

- Pair / Setup state: LED is green and flashing slowly
- Unconnected state: LED is green and flashing slowly
- Connected state: LED is green and always on
- Ready for connection state: LED is green and flashing intermittently

Note: You can only setup via a compatible smartphone or tablet and not via a PC.

3.2 User Account and Camera Setup on Android™ Devices

What you need

- SCOUT73 Camera
- Power adapter for the Camera
- Device with Android™ system version 4.2 and above

3.2.1 Power ON and Connect the Camera

- Connect the SCOUT73 power adapter to a suitable electrical outlet and insert the power adapter plug into the power socket of the Y-shaped Power/LAN cable connector. (see section 4.1 D: Connecting the Camera Unit's Power Supply)
- The Camera's green LED blinks after the Camera has finished booting.

3.2.2 Download the Hubble App

- Go to Google Play™ Store to search for "Hubble for Motorola Monitors" application.
- Download "Hubble for Motorola Monitors" App from Google Play™ Store and install it on your Android™ device

3.2.3 Run Hubble for Motorola Monitors App on Android™ Devices

- Ensure that your Android™ device is connected to your Wi-Fi® router.
- Run "Hubble for Motorola Monitors" App, enter your account information, read through the Terms of Service, then select "I agree to the Terms of Use" before you tap **Create**. (Picture A1)

Note

If you already have a Hubble App account, please select Already have an Account? to go to the next step.

A1

3.2.4 Add the Camera to your account

- Tap ⊕ on the top right corner of the screen to add camera. (Picture A2)

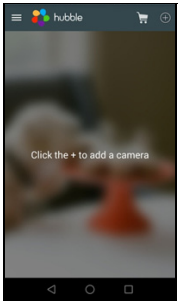

A2

- The following setup instructions will appear on the screen. (Picture A3)

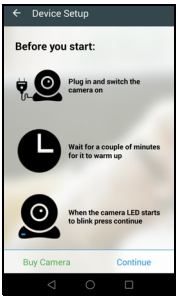

A3

- Plug in and switch on the camera, and wait for a couple of minutes for it to warm up.
- Tap **Continue.**

- The following setup instructions will appear on the screen. (Picture A4)

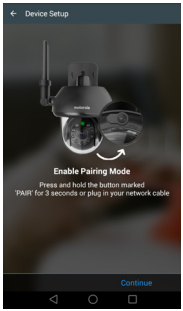

A4

- Press and hold the **PAIR** button on the side of the Camera Unit for 3 seconds. The LED indicator on the Camera Unit will flash rapidly.
- Tap **Continue.**
- The App will automatically search for and connect to your Camera as shown in the pictures below. (Pictures A5, A6).

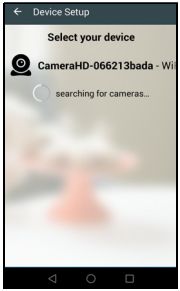

A5

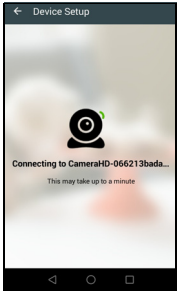

A6

- Select your Wi-Fi® Network, enter your password and then tap **Connect**. (Pictures A7, A8)

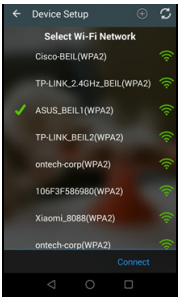

A7

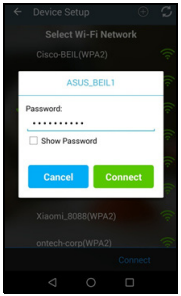

A8

- It will take a few minutes for the Camera to connect to the Wi-Fi® network before showing the connection status. (Pictures A9, A10)
- If connection fails, please tap **Retry** and repeat the steps starting from 3.2.4.

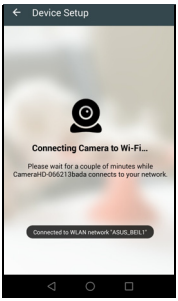

A9

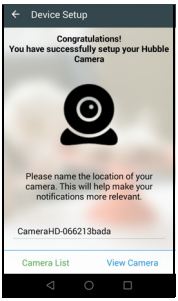

A10

- Tap **View Camera** to view the video captured by the Camera Unit. The LED indicator on the Camera Unit will light up in green.

3.3 User Account and Camera Setup on iPhone®/iPad®

What you need

- SCOUT73 Camera
- Power adapter for the Camera
- iPhone® / iPad® with iOS version 7.0 and above

3.3.1 Power ON and Connect the Camera

- Connect the SCOUT73 power adapter to a suitable electrical outlet and insert the power adapter plug into the power socket of the Y-shaped Power/LAN cable connector. (see section 4.1 D: Connecting the Camera Unit's Power Supply)
- The Camera's green LED blinks after the Camera has finished booting.

3.3.2 Download the Hubble App

- Go to the App Store to search for "Hubble for Motorola Monitors" application.
- Download "Hubble for Motorola Monitors" App and install it on your iPhone®/iPad®.

3.3.3 Run Hubble for Motorola Monitors App on iPhone®/iPad®

- Ensure that your iPhone®/iPad® is connected to your Wi-Fi® Router.
- Run the "Hubble for Motorola Monitors" App, enter your account information, read through the Terms of Service, and then select "I agree to the Terms of Service" before you tap **Create.** (Picture i1)

Note:

If you already have a Hubble App account, please select Already have an Account? to go to the next step (Picture i1).

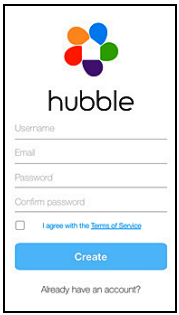

i1

3.3.4 Add the Camera to your account

- Tap ⊕ on the top right corner of the screen to add camera. (Picture i2)

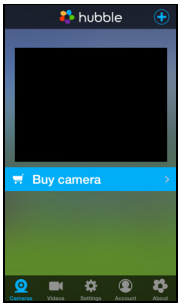

i2

- The following Bluetooth setup instructions will appear on the screen. (Picture i3)

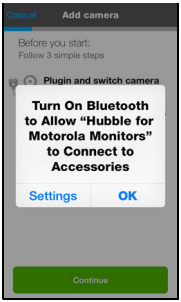

i3

- Tap **Settings** and activate Bluetooth on your iPhone®/iPad® (Pictures i4,i5).

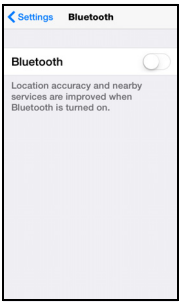

i4

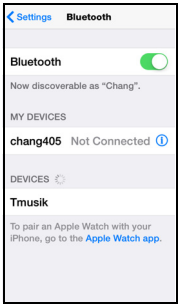

i5

- Press the **HOME** key to return to the home screen, then tap on "Hubble for Motorola Monitors" App to resume setup.
- The following setup instructions will appear on the screen. (Picture i6)
  Note that if Bluetooth is on, you will be brought to this step directly.

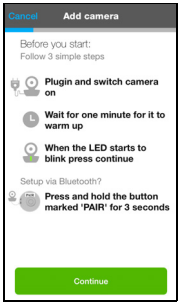

i6

- Wait for a couple of minutes for the Camera Unit to warm up and tap **Continue**.

- The following will appear on the screen. (Pictures i7, i8)

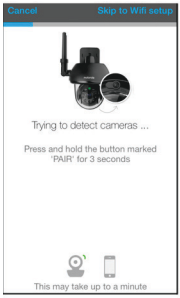

i7

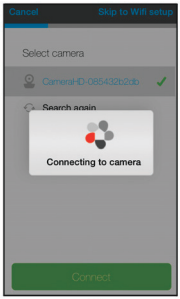

i8

- Name the location of your Camera Unit and tap **Continue.** (Pictures i9, i10)

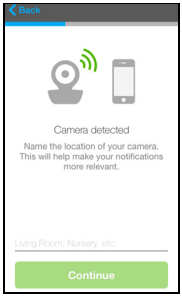

i9

i10

- The Camera Unit will search for the Wi-Fi® network (Picture i11) and display a list of available networks. (Picture i12)

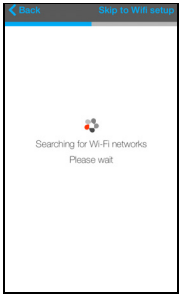

i11

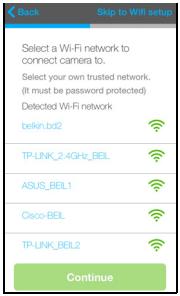

i12

- Select your Wi-Fi® network and tap **Continue.** (Picture i13)
- Enter your Wi-Fi® password and tap **Next.** (Picture i14)

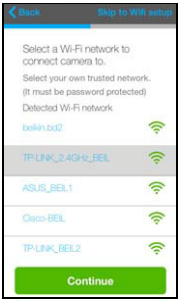

i13

i14

- It will take a few minutes for the Camera Unit to connect to the Wi-Fi® network before showing the connection status. (Pictures i15, i16)

- If connection fails, tap **Retry** and repeat the steps starting from 3.3.4.

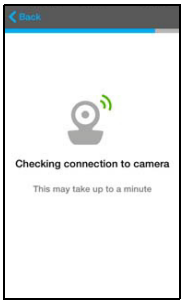

i15

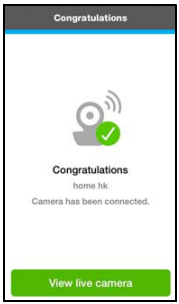

i16

- Tap **View Live Camera** to view the video captured by the Camera Unit. The LED indicator on the Camera Unit will light up in green.

4. Camera

4.1 Install your Camera and setting up

A. Fixing Mounting Plate on the wall.

- Mark the position of the screw holes on the wall.
- Drill 4 holes and hammer the drywall plugs (included) into the holes as needed.
- Fasten the mounting plate on the wall with the 4 Philips head screws (provided).

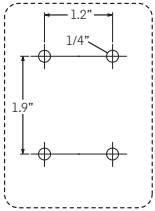



B. Hanging the Camera unit on the Mounting Plate.

- Place the 4 mounting slots of the camera base on to 4 catches on the mounting plate.
- Make sure the unit sits firmly on the mounting plate with the center holes of 2 parts lined up.

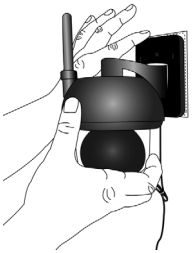

C. Secure the Camera Unit.

- Fasten the unit to the mounting plate at the center hole with the tamper-proof screw by the wrench key provided.

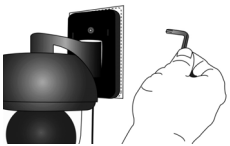

D. Connecting the Camera Unit's Power Supply.

- Connect the camera's round plug to the Y-shaped Power/LAN cable connector.
- Insert the power adapter plug into the Power Socket and connect the other end of the power adapter to a suitable electrical outlet. (LAN socket provides an option for you to connect via LAN cable if it is necessary)
- The LED indicator will light up.

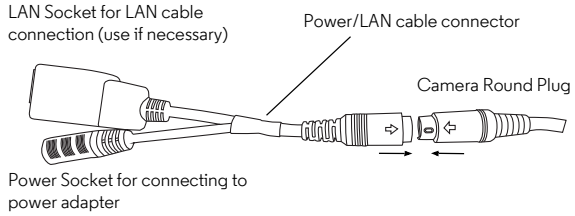

4.2 Overview of the Features on Hubble App

	Menu	• Tap **Cameras** to access the camera list. • Tap **Event Log** to access the video record list that is triggered by Motion or Sound detection. • Tap **Account** to access user **Profile**, subscription **Plan**, **Notifications** setting, **Remote Connection Setting** and **About Hubble**
	Photo/Video	• Take a photo or record a video from your Camera. • Tap the Video icon to activate Video function. Tap and hold the red button to start recording and release to stop. • Tap the Camera icon to switch to Camera mode. You can capture photos from Camera view. ***Note:*** *Photos and videos will be stored in the internal flash memory of your smart device, and can be accessed via the Gallery or Media Player (Android Device). To play videos, please use the Hubble App.*
	Pan and Tilt	Tap to pan right and left, tilt up and down.
	Zoom	Slide the scroll bar on the right hand side of the screen to zoom in or zoom out. You can also use the pinch-in and pinch-out gestures to zoom out or zoom in a picture. To use pinch-to-zoom gesture, your device must support multi-touch technology.

	Camera Setting	You can change the Camera settings by tapping on the **Settings** icon. • Tap **Details** to review Camera Name, Cloud Subscription, Change Image, Timezone, Camera Model, Firmware Version and Delete All Events.
	Add Camera	Enter Add Camera procedures.
	Delete All Events	Tap to delete all events.
	Select Events	Check the box to select recorded event(s).
	Edit Events	Tap to select and delete event(s).
	Delete Events	Tap to delete selected event(s).

5. Working with PC/Notebook

- Go to URL: https://app.hubbleconnected.com/#login
- Enter your User Name and Password and then click Login if you have already created an account.
- Click on the Camera list paired in your account via Android™ device or iPhone®/iPad®, and the Camera view will appear on screen. You can easily stay connected with your favorite people, places and pets wisth live video streaming.
- On the website, you can change the settings by following the Menu instruction steps.

6. Procedure for resetting the Camera

Note: If your Camera is moved from one router (e.g. home) to another router (e.g. office) or you have Camera setup issues, then this Camera must be reset again. Please reset the Camera with the following procedure:

1. Unplug the Power Adapter.
2. Press and hold the PAIR button on the side of the Camera, then plug the Power Adapter into the electrical outlet, the LED indicator turns ON.
3. Release the PAIR button and wait for the Camera to complete the internal reset procedure, the LED indicator will turn Off.
4. You can add your camera again by following the steps 3.2.4 for Android device or 3.3.4 of iOS device.

7. Help

Noise interference

To avoid background noise or echoes, ensure that there is enough distance between your device and the Wi-Fi® Camera Unit.

Use of other 2.4 GHz products, such as Bluetooth™ systems or microwave ovens, may cause interference with this product. Keep the Wi-Fi® Camera Unit at least 5ft away from these types of products, or turn them off if they appear to be causing interference.

Lost connection

Check your Wi-Fi® settings. If necessary reconnect your Wi-Fi®. Ensure the Wi-Fi ® Camera Unit is switched ON. Wait a few minutes to make the connection with the Wi-Fi® system.

If you forgot your password

If you do not remember your password, tap Forgot password and submit your e-mail address. A new password will be sent to your e-mail address immediately.

Troubleshooting

Category	Problem Description / Error	Solution
Account	I am unable to login even after registration.	Please check your user name and password.
Account	I receive an error message saying: "Email ID is not registered".	Please ensure that you have registered with us. Tap **Create Account** to create an account tobe able to use the Wi-Fi® Home Video Camera.

Account	What do I do if I forgot my password?	Click on the "Forgot Password" link on the https://app.hubbleconnected.com/#lostpassword website OR your Android™ or iOS application. An email will be sent to your registered email address.
Account	I am unable to receive a new password although I have used the "Forgot password" option.	1. The e-mail might have been sent to your Junk Mail Folder. Please check your Junk Mail Folder. 2. There might be a delay in getting your e-mail. Please wait a few minutes and refresh your email account.
Connectivity Issues	I get a message: We are having problems accessing your camera. This could be due to lack of internet connection. Please wait and try again later.	1. Please try again in a few minutes. This could be because of any issue with your internet connection. 2. If the problem remains, please restart your Camera to check if this fixes the problem. 3. Please restart your Wireless Router.
Viewing Camera	When I am in "remote mode", the video stops after 5 minutes. How do I view for longer?	When you are accessing your Camera via a network different from your home network (over internet) your video times out after 5 minutes. You can click on the Camera again from the Android™/iOS application to start streaming again. If you are accessing from your web-browser, then you can press on the **Reload** button to start viewing your Camera video stream again.

Connectivity Issues	My Phone application displays the following message: "Unable to connect to BMS server".	1. Check the Wi-Fi® network strength. 2. Check if you are connected to the internet by starting the phone browser and going to a website like www.google.com. 3. Try again if you are successful connecting to the internet. 4. Plug the LAN wire into RJ45 socket directly and connect to the internet in case the Wi-Fi® signal is not good.
Setting Up	While I am adding a new camera to my account, I am not able to find any Cameras to add.	If you are trying to add a Camera which has previously been added into your account or another account, you will first have to reset the Camera. This can be done by pressing and holding the PAIR button at the bottom of the Camera for 5 seconds.
General	What are the supported browsers for accessing from my PC/ Mac?	On PC and Mac, we recommend to use Google Chrome. However the following browsers are also supported: PC: Internet Explorer® 9 and above. Mac: Safari® 6.
Connectivity issues	I found interference caused by my other web cam devices.	Video streaming performance is related to internet bandwidth, especially if you have 2 or more video streaming devices that are working through the same router.

General	What is the significance of LED flashing?	A blinking LED indicates the following status: Rapid blinking: 1. Your Camera is in setup mode. You can add the Camera to your account in this mode. Out of the box, the Camera is in setup mode. To reset to setup mode, press and hold the PAIR button on the bottom of the Camera until the LED indicator flashes rapidly. Slow blinking: 2. The Camera is either connecting to the router or lost the link to the router. Please ensure that the Camera is in the Wi-Fi® signal range. LED is stable: The Camera is connected to the Wi-Fi® network.
Connectivity Issues	I am not able to access my Camera.	Please check if the Camera is within Wi-Fi® range. If the LED on your Camera is slow blinking, please try to move the Camera closer to the router for better Wi-Fi® range and try again.
Setting Up	During setup on device for Android™ and iOS, during the last step I am not able to find my Camera and the setup fails.	Please reset the Camera to setup mode and try again. Press and hold the PAIR button on the bottom of the Camera until you hear a beep. The LED indicator flashes rapidly, indicating that it is in setup mode. Now restart the setup from your Smartphone again.

Connectivity Issues	Even though I am accessing my Camera from the same Wi-Fi® network, I still find my Camera is shown as remote. I can only access it for 5 minutes at a time.	Please check your wireless router settings. For example, in Buffalo brand routers there is an option called Wireless Isolation. Please disable this option.
Camera	When I try to view the Camera, I get a prompt for Camera firmware upgrade. What should I do?	Please upgrade your firmware. This takes around 5 minutes. We push upgrades from time to time to improve the Camera features.
General	Which platforms are supported for accessing my Camera?	Windows® 7*, Windows® 8* *Java browser plug-in needed Mac OS® version 10.7 or above Internet Explorer® version 9 or above Firefox® version 18 or above Chrome™ version 24 or above Safari® version 6 or above Java™ version 7 or above Android™ version 4.2 or above iPhone®/iPad® iOS version 7.0 or above.
General	What is the meaning of "Local Camera" and "Remote Camera"?	When you are accessing your camera from the same wireless network (Home) in which it is configured, it is a local camera. When you are accessing your Camera away from your home it is a remote camera. You may be using 3G, 4G or 4G LTE or a Wi-Fi® connection outside of your home.

General	How do I download the APP for Android™ and iOS devices?	**Android™:** - Open Google Play App on your Android™ device - Select Search - Type "Hubble for Motorola Monitors" - The results will have Hubble for Motorola Monitors App by Binatone - Select to install it **iOS Device:** - Open iOS APP Store™ - Select search - Type "Hubble for Motorola Monitors" - The results will have Hubble for Motorola Monitors App by Binatone - Select to install it
Setting up	When the video is cut off, the application attempts to reconnect and and results in lost sound and choppy video.	You will need to turn off the auto lock function of your smart device to ensure continuous video/audio feeding.
Features	How many users can access the Camera at one time?	If you are accessing in local more, two users are supported, after two users all streaming will go through remote server. This allows for unlimited user access to a single Camera at one time.

8. General Information

If your product is not working properly....

1. Read this User's Guide.
2. Contact Customer Service at:

   US and Canada 1-888-331-3383

   Email: support@motorolahome.com

Consumer Products and Accessories Limited Warranty ("Warranty")

Thank you for purchasing this Motorola branded product manufactured under license by Binatone Electronics International LTD ("BINATONE").

What Does this Warranty Cover?

Subject to the exclusions contained below, BINATONE warrants that this Motorola branded product ("Product") or certified accessory ("Accessory") sold for use with this product that it manufactured to be free from defects in materials and workmanship under normal consumer usage for the period outlined below. This Warranty is your exclusive warranty and is not transferable.

Who is covered?

This Warranty extends only to the first consumer purchaser, and is not transferable.

What will BINATONE do?

BINATONE or its authorized distributor at its option and within a commercially reasonable time, will at no charge repair or replace any Products or Accessories that does not conform to this Warranty. We may use functionally equivalent reconditioned/ refurbished/ pre-owned or new Products, Accessories or parts.

What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR OR REPLACEMENT PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA OR BINATONE BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR ACCESSORY, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS OR ACCESSORIES TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

Some jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This Warranty gives you specific legal rights, and you may also have other rights that vary from one jurisdiction to another.

Products Covered	Length of Coverage
Consumer Products	**One (1) year** from the date of the products original purchase by the first consumer purchaser of the product.
Consumer Accessories	**Ninety (90) days** from the date of the accessories original purchase by the first consumer purchaser of the product.
Consumer Products and Accessories that are Repaired or Replaced	**The balance of the original warranty or for Ninety (90) days** from the date returned to the consumer, whichever is longer.

Exclusions

Normal Wear and Tear. Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

Batteries. Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this Warranty.

Abuse & Misuse. Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of MOTOROLA or BINATONE, are excluded from coverage.

Use of Non-Motorola branded Products and Accessories. Defects or damage that result from the use of Non-Motorola branded or certified Products or Accessories or other peripheral equipment are excluded from coverage.

Unauthorized Service or Modification. Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than MOTOROLA, BINATONE or its authorized service centres, are excluded from coverage.

Altered Products. Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola branded housings, or parts, are excluded from coverage.

Communication Services. Defects, damages, or the failure of Products or Accessories due to any communication service or signal you may subscribe to or use with the Products or Accessories is excluded from coverage.

How to Obtain Warranty Service or Other Information?

To obtain service or information, please call:

US and Canada 1-888-331-3383

Email: support@motorolahome.com

You will receive instructions on how to ship the Products or Accessories at your expense and risk, to a BINATONE Authorized Repair Centre.

To obtain service, you must include: (a) the Product or Accessory; (b) the original proof of purchase (receipt) which includes the date, place and seller of the Product; (c) if a warranty card was included in your box, a completed warranty card showing the serial number of the Product; (d) a written description of the problem; and, most importantly; (e) your address and telephone number.

These terms and conditions constitute the complete warranty agreement between you and BINATONE regarding the Products or Accessories purchased by you, and supersede any prior agreement or representations, including representations made in any literature publications or promotional materials issued by BINATONE or representations made by any agent employee or staff of BINATONE, that may have been made in connection with the said purchase.

FCC and IC regulations

FCC Part 15

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Privacy of communications may not be ensured when using this device.

To ensure safety of users, the FCC has established criteria for the amount of radio frequency energy that can be safely absorbed by a user or bystander according to the intended usage of the product. This product has been tested and found to comply with the FCC criteria.

This Class B digital apparatus complies with Canadian ICES-003.

CAN ICES-3(B)/NMB-3(B)

WARNING

Changes or modifications, to this equipment not expressively approved by the party responsible for compliance could void the user's authority to operate the equipment.

The socket-outlet shall be installed near the equipment and shall be easily accessible.

Industry Canada

This device complies with Industry Canada licence-exempt RSS standard(s): Operation is subject to the following Two conditions:(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

The term "IC: " before the certification/registration number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

9. Technical Specifications

Camera Unit

Wi-Fi®	802.11 b/g/n
Image sensor	Color CMOS 1M Pixels
Lens	f = 2.3 mm, F = 2.4
IR LED	8 pcs
Power Adapter:	Zhongshan Baolijin Electronic Co.,Ltd. Input: 100-240Vac, 50/60Hz, 300mA Output: 5Vdc, 2000mA
Water Resistance	IP66

motorola

Manufactured, distributed or sold by Binatone Electronics International LTD., official licensee for this product. MOTOROLA and the Stylized M logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. and are used under license. Apple logo and Safari are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc. Google Play, Android, and Chrome are trademarks of Google Inc. Wi-Fi is a trademark of the Wi-Fi Alliance. Internet Explorer and Windows are trademarks of the Microsoft group of companies. Firefox is a registered trademark of the Mozilla Foundation. Adobe and Flash are either registered trademarks or trademarks of Adobe Systems Incorporated. Java is a registered trademark of Oracle and/or its affiliates. All other trademarks are the property of their respective owners. © 2015 Motorola Mobility LLC. All rights reserved.

US_EN Version 5.0
Printed in China